


DIVAN BED ASSEMBLY INSTRUCTIONS

Standard divan bed bases are formed of two upholstered wooden bed frames – when it comes to joining them together and attaching the feet of your bed and the headboard, follow these easy steps.

1. Gather your tools

You will need a screwdriver and a mallet would be useful. Check you have the right number of accessories (below) in the plastic bag provided with your divan bed base. These items are usually stapled to the underneath of the bed.

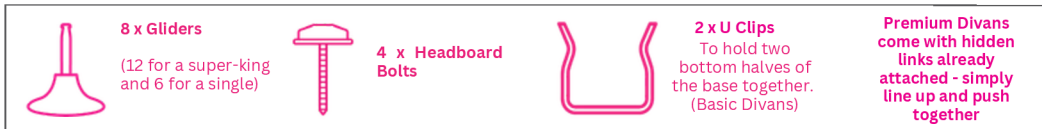

2. Remove all the packaging carefully

This includes the staples keeping the drawers or sliding drawers shut and those securing the corner protectors to your divan bed. Dispose of the packaging in a responsible way and keep away from children and pets.


3. Turn your divan bed base upside-down

Insert a glider into the socket on each corner and gently tap them into place with your hand or if they are a bit stiff you can use a rubber mallet.



Basic Divans

Premium Divans

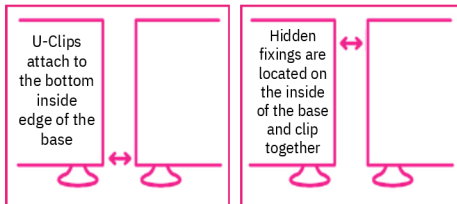

4. Push the two halves together

If your divan bed is in two sections or more, push them together, flat end to flat end. Pierce a hole where the stickers indicate and using the linking bar and screws supplied attach the two pieces together. Basic divans come with 2 U-clips instead which clip onto the underneath of the bed.

Divans with drawers are pre-assembled and in place already, if you haven't already, remove the retaining piece of material holding them in place, taking care to remove all staples to avoid injury.

Attaching your headboard

You will either have a headboard with struts (Fig A) or a floorstanding headboard (Fig B)



Attach the struts to the headboard

Locate the stickers/staples on the back of the headboard and pierce the fabric with a small screwdriver. Attach the wooden struts with the 4 small screws provided to the back of the headboard using a screwdriver.

Floor-standing headboards don't require any assembly and are ready to be attached to the base.

5. Attach your headboard to your divan bed base

Locate the stickers on the head end of the divan bed, feel for the hole and pierce through the fabric. Insert the headboard bolts loosely. Slide the struts over the bolts and tighten by hand making sure it is level. When complete your headboard should be sitting directly on top of the mattress.

