

# OTTOMAN ASSEMBLY INSTRUCTIONS

## 1. Gather your tools



you will need a screwdriver, socket set/spanner and a rubber mallet would be helpful. check you have the right number of accessories in the plastic bag provided.



## 2. Remove all the packaging carefully

### 3. Turn your ottoman bed base on its side

Insert a glider into the socket on each corner and gently tap them into place with your hand or a rubber mallet.

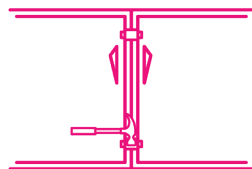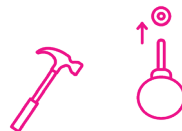


### 4. Join the two halves together

Position the base flat end to flat end. Use the U clips supplied to attach both halves together. Tap into place with a hammer if required.

### 5. Joining the lid together

Locate the cutaway section on the left side of the right lid, feel for the hole and pierce the material with a small screwdriver all the way through to the left lid. In the left lid there is a receiving nut. Sit alongside the base unit and rest the lid on your shoulder; then attach one of the large bolts through each half of the lid into the receiving nut and hand tighten. Take care not to cross thread the bolt.

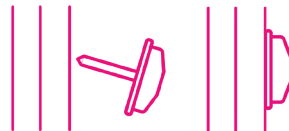

### 6. Attaching the gas lift struts


With the combined lid units fully open use the bolts provided to attach the gas pistons which are disconnected for transit. Usually the bolts are already in situ. Line up the gas strut and reconnect the bolt with a spanner or socket set. Sometimes, the hole of the gas strut is not aligned to the hole for the bolt. To remedy this insert a screwdriver into the hole and turn until into position.

### 7. Assemble the headboard

Locate the stickers/staples on the back of the headboard and pierce the fabric with a small screwdriver. Attach the wooden struts with the 4 small screws provided to the back of the headboard using a screwdriver.

### 8. Attach the headboard\*

Locate the stickers on the head end of the divan bed, feel for the hole and pierce through the fabric. Insert the headboard bolts loosely. Slide the struts over the bolts and tighten by hand making sure it is level.

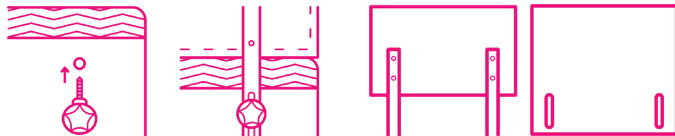

Use 2 bolts for strut mounted headboards and 4 bolts for floor-standing headboards.

\*Please note, if you have a side-lift ottoman you will need to thread the bolts through the spacers provided so the lid doesn't catch on the headboard when opening/closing.

### 9. Final step

Close the lid and place your mattress on top. This will ensure that the lid is permanently held down by the weight of the mattress. Adjust the height of the headboard so it is sitting on top of your mattress. Your ottoman is designed to give you many years of service, and as has moving parts you will need to check and adjust the bolts periodically to ensure they are nice and tight.